




## 400 Series Assembly Instructions

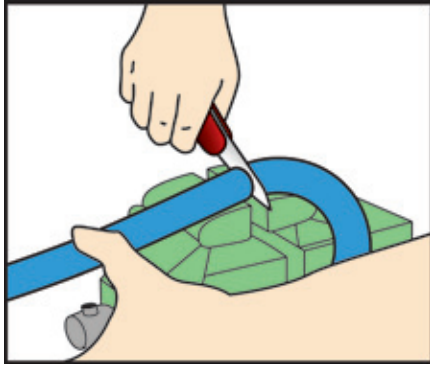

1 Cut the rubber hose to the correct length making sure the end is square.

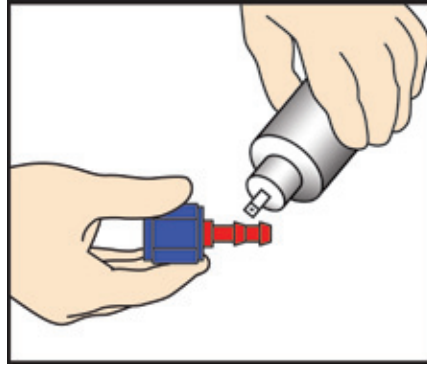

2 lubricate the barb with a suitable lubricant.

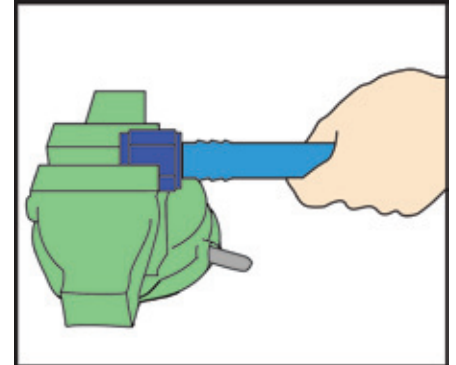

3 Push the hose onto the barb until it slides home under the collar.